

P-INOXN / P-INOXN-S5

STAINLESS STEEL PLATFORM - 4 LOAD CELLS IP68


LAUMAS®



Capacity up to 3000 kg



- AISI 304 stainless steel platform.
- **P-INOXN**: 4 load cells FT-P 1000 kg
P-INOXN-S5: 4 load cells FT-P 500 kg
17-4 PH stainless steel - IP68 (on request: IP69K).
- IP67 stainless steel junction box with equalization board and 6-wire output cable (length: 5 m).
- Inspectable compartments for load cells and junction box.
- AISI 304 stainless steel adjustable feet, self-centering on sphere.
- Two M12 holes for lifting eyebolts.

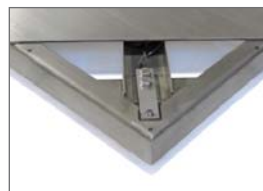

CAPACITY	kg	ACCURACY CLASS C3		DIMENSION (mm)	WEIGHT (kg)	CODE
1500		•	•	1250 x 1250	117	P1250INOXNS5
1500		•	•	1500 x 1500	156	P1500INOXNS5
3000		•	•	1250 x 1250	117	P1250INOXN
3000		•	•	1500 x 1500	156	P1500INOXN

ON REQUEST

CERTIFICATIONS



OIML R60 C3

CERTIFICATIONS ON REQUEST



Declaration of conformity + IP69K marking protection rating

Water protection in case of high-pressure or steam jet cleaning (test: pressurized water is sprayed from a distance of max 150 mm)
Water pressure: 100 bar; temperature: 80 °C; test duration: 250 seconds (reference standard: DIN 40050-9)



ATEX II 1GD (zone 0-1-2-20-21-22)




IECEx (zone 0-1-2-20-21-22)

P-INOXN / P-INOXN-S5

STAINLESS STEEL PLATFORM - 4 LOAD CELLS IP68

LAUMAS®

DIMENSIONS (mm)

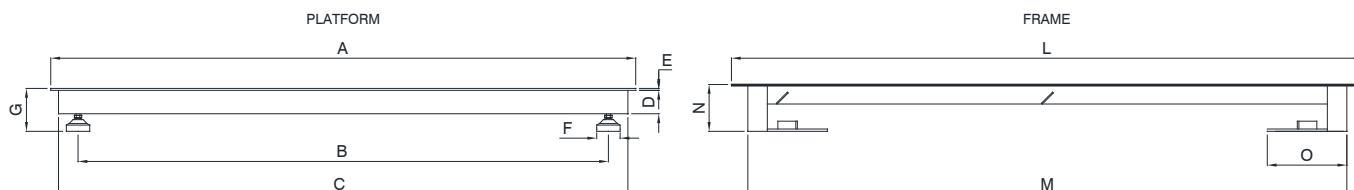


PLATFORM

Code	Load cells capacities	Code	Load cells capacities	A	B	C	D	E	F	G
P1250INOXNS5	500 kg	P1250INOXN	1000 kg	1250 x 1250	1112	1210	60	4	60	90 ÷ 105
P1500INOXNS5	500 kg	P1500INOXN	1000 kg	1500 x 1500	1362	1460	60	4	60	90 ÷ 105

FRAME

Code	L	M	N	O	Gross weight
TELP1250INOX	1366 x 1366	1272 x 1272	110	200	30 kg
TELP1500INOX	1616 x 1616	1522 x 1522	110	200	36 kg

ELECTRICAL CONNECTIONS

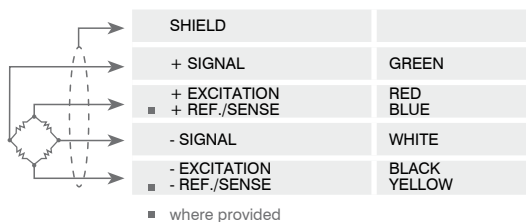

OPTIONS ON REQUEST

	DESCRIPTION	CODE
	AISI 304 stainless steel pit frame with centering plates. For platforms: 1250x1250 mm 1500x1500 mm	TELP1250INOX TELP1500INOX
	Stainless steel access ramp. Dimensions: 1250x1060x110 mm	P1250INOXRAMP
	Stainless steel indicator-holder column (Ø38 mm, height 700 mm). Stainless steel bracket for platform mounting.	COLONNAM + STAFFAIN
	AISI 304 stainless steel constraint against lateral displacement and overturning (1 piece).	PPV
	Non-standard capabilities.	

The Company reserves the right to make changes to the technical data, drawings and images without notice.