


Differential Pressure sensor installation kit




Remote detection of an HVAC air filter condition providing savings of resources and costs, and healthy working conditions. Get the most out of filter life and maintain healthy ambient air quality with wireless solution ready for easy installation.

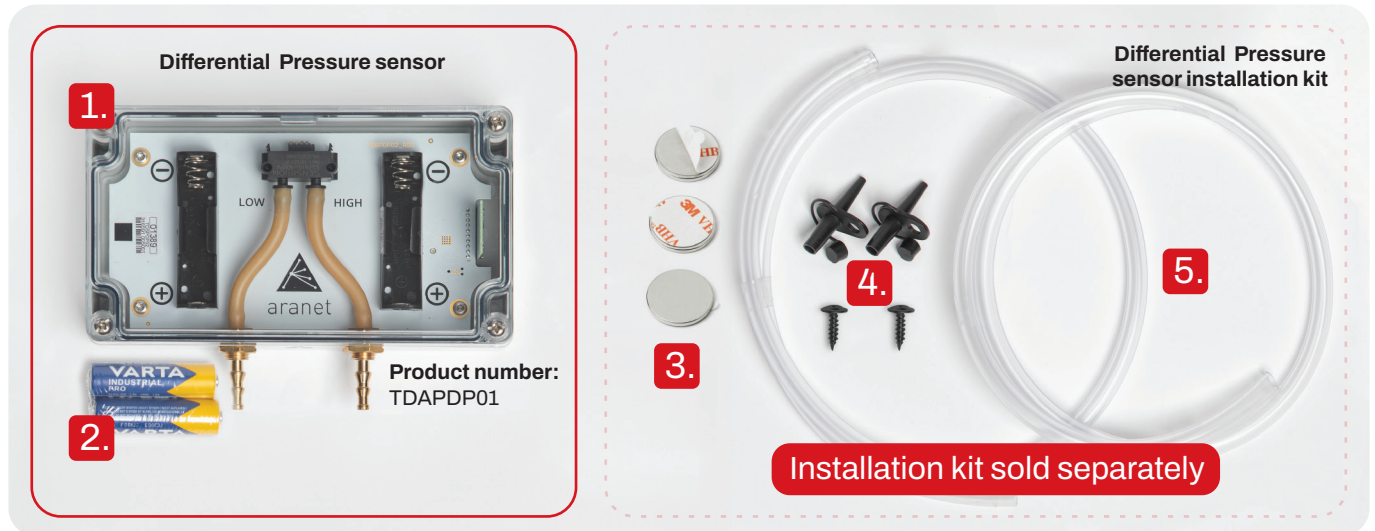

The kit includes

1. Aranet Differential Pressure sensor
2. Batteries last up to 10 years
3. Magnetic holders for sensor
4. Connectors with screws that must be installed before and after the filter box
5. Tubing for sensor

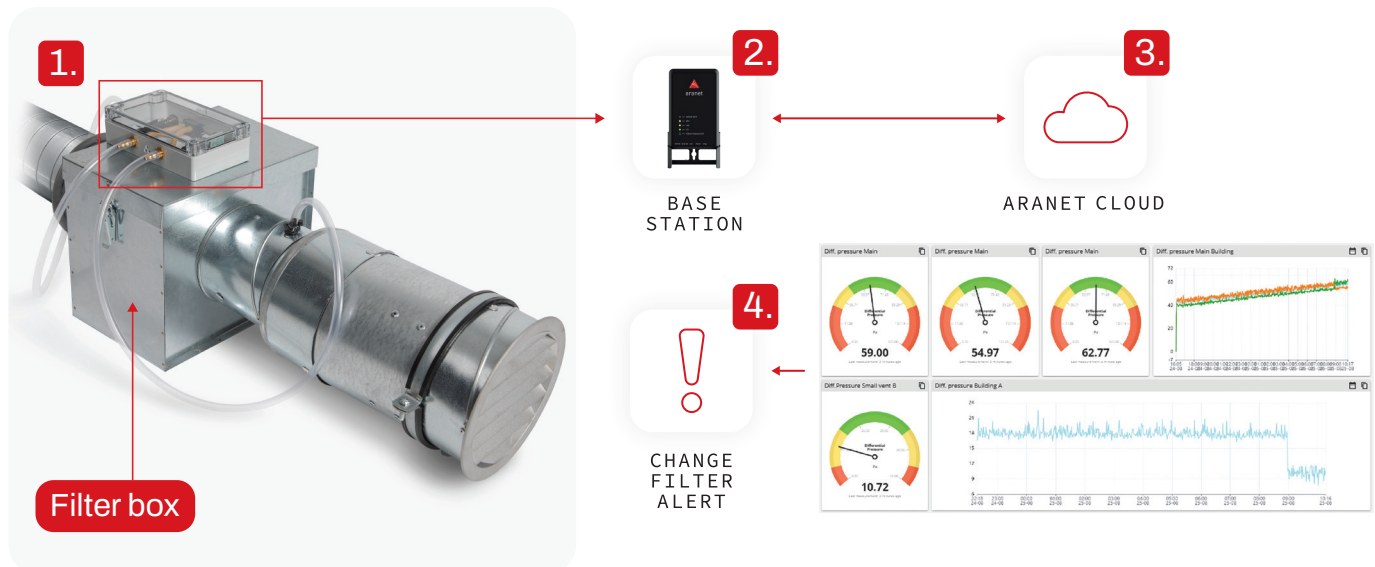

How it works

1. The wireless differential pressure is installed at the filter location
2. Sensor is paired with the base station that stores measured data
3. Monitor data locally or remotely through Aranel Cloud from multiple locations
4. Replace the filter upon receiving an alert